PYLE®

disco jam

600 Watt Powered Two-Way PA Speaker System w/ Bluetooth Compatibility, USB & SD Readers, FM Radio, 3.5 mm Input & DJ Disco Lights

www.pyleaudio.com

Operating Instructions

PSUFM1049A

Specifications

PSUFM1049A

*10" Woofer And 3 * 5" Piezo Tweeter
*USB Flash and SD Card Readers with FM Radio
*USB Provides 5v 1A Charge For Smart Phones and Other Devices
*Display Screen Shows Number Of Songs, Play Time and FM Radio Frequency
*Bluetooth Compatible For playing Music From Most Smart Phones
*Portable Carrying Handles and Wheels For Easy Transport
*Disco Ball Lights With ON/OFF Control
*Two 1/4" Microphone Inputs
*RCA Output for Connecting Passive Speakers
*One 3.5mm AUX Line Input With Cable (Compatible With All MP3 Players And Devices With Headphone Outputs)
*RCA Stereo Input And Output
*One 1/4"Lo-Z Guitar Input Jack With Volume Control
*7 Band EQ With EQ On/Off Control
*600 Watt Peak / 300 Watt RMS Power @ 4 Ohm
*Sensitivity (1W/1M): 90dB
*Ported Enclosure For Added Bass Response
*Built In Crossover Network
*Frequency Response: 20Hz-20Khz
*Crossover Frequency: 3.5kHz
*Woofer Magnet Weight: 25 oz.
*35mm Speaker Stand Mount
*AC 110/220V Power Switch
*Dimensions: 27.2" (H) X 15.4" (W) X 13.8" (D)
*Weight: 26.5 Lbs.

Safety Notes

1. Correct power must be used to operate this unit properly, do not use any other powering options, cords or methods.

2. Carfully handle, plug and unplug the power cable when handling. Hold the plug with a firm grip and when plugging or unplugging from sockets.

3. Do not open chassis! Extermely dangerous! Do not put your hands inside the chassis. If the device begins to malfunction do not attempt to repair, unplug the unit and contact Pyle immediately.

4. Don't use volatile or dangerous chemical cleaners on the unit (like toluene, alcohol, gasoline etc.) Use gentle cleaners.

5. Keep the unit in a well ventilated environment and keep away from, direct sunlight to prevent unit from overheating.

6. Avoid the unit from moisture or rain.

Operating Controls - System Layout

① Guitar Input Jack

② Guitar Volume Control

③ EQ Switch

④ Bass Control

⑤ Treble Control

⑥ Volume Control

⑦ Line-In/Aux Audio Input

⑧ EQ Control

⑨ Mode Control

⑩ Next Control

⑪ USB/SD Jack

⑫ Play /Pause Control

⑬ Prev Control

⑭ Echo Control

⑮ Mic Volume Control

⑯ Mic Input Jack

⑰ Disco Lights

⑱ Tweeter

⑲ Woofer Speaker

⑳ Vent Hole

㉑ Metal Corner

㉒ Fixed Stand For The Unit

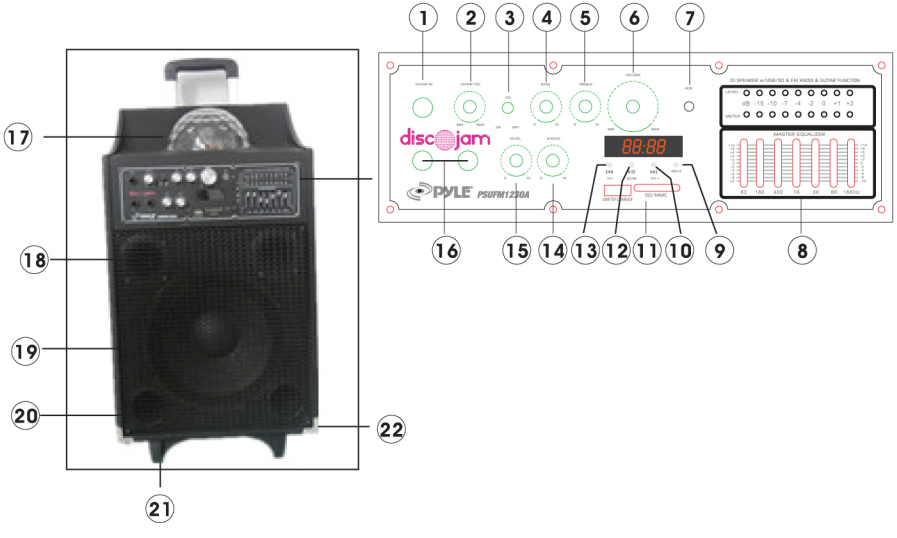

Speaker Board Schematic

1. Fm Antenna
2. Line-Out/Aux Audio Output
3. Lights Switch
4. Ac Power Supply
5. Voltage Selector Switch
6. Power Switch
7. Vice-Box Power output
8. Line-In/Aux Audio Input
9. Trailer Handle
10. Trailer Handle
11. Fixed Stand For The Trailer
12. Trailer Wheel
13. Truckle Of Trailer

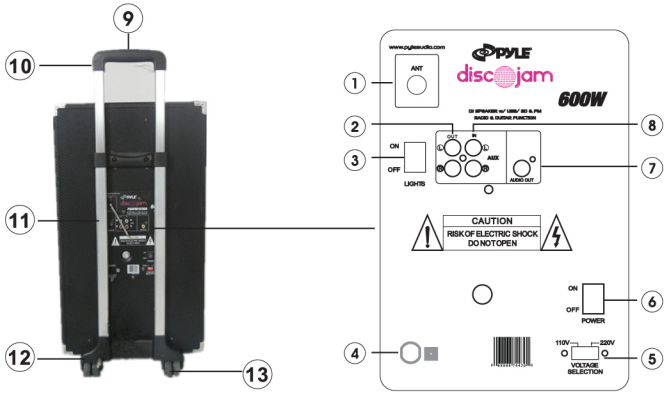

Remote Control Diagram

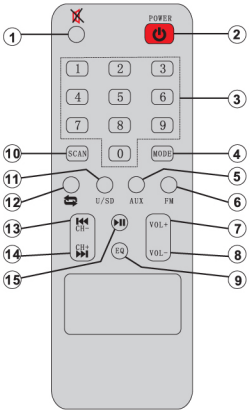

1. Mute switch
2. Power
3. 0-9
4. Mode Control
5. AUX
6. FM
7. VOL+
8. VOL-
9. EQ
10. Fm Scan
11. USB/SD Selector
12. Repeat
13. Prev Control
14. Next Control
15. Play/Pause Control

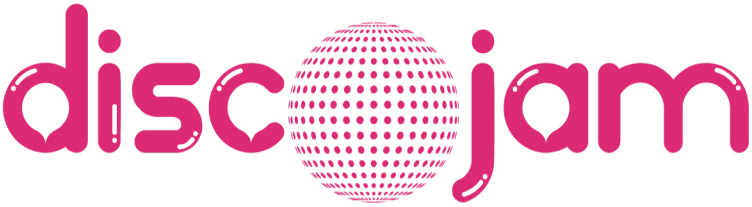

www.pyleaudio.com

tel: 718.535.1800 fax: 718.236.2400

1600 - 63rd StreetBrooklyn, N Y,11204